


Quick Start Guide

Download our Aura[™] app for quick set up and operation of your device:



Or follow these instructions:

- Step 1: Use key to open doors, open atomizer latch, then remove reservoir and atomizer.
- **Step 2:** Detach and fill reservoir with Arresta[™].
- **Step 3:** Replace tank/atomizer unit and close latch.
- **Step 4:** Ensure filter/nozzle is attached and fan vent is open.

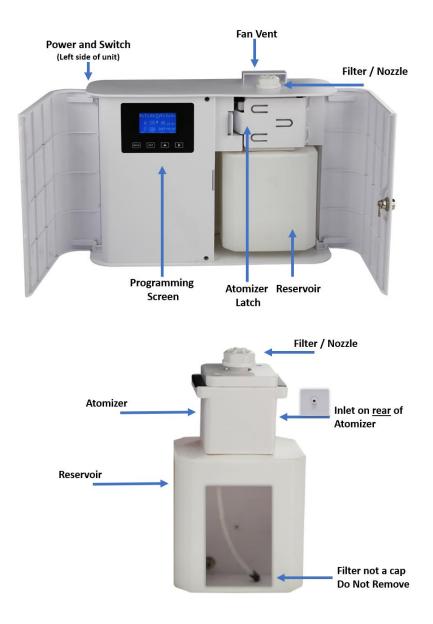

Step 5: Power unit on, Screen lights up


Move back to p	revious settings	
	Save settings	Move to next selection
		st selected setting

- Step 6: Setting the proper date and time
 - Push the state and the state at the same time.
 - The screen is now in Time/Date • Setup mode.
 - Use the **I** to move positions.
 - Use the **L** to modify specific position values, then use **I** to move to next position.
 - When all finished press ENT to save your settings.





- Step 7 Programming Activity
 - Press
 D to enter programming mode.

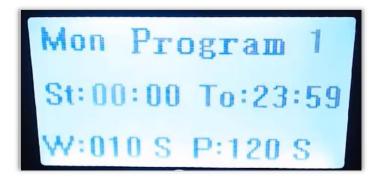

 Programming Only Monday Program One will set that as the default program and the unit will use those settings 7 days a week.

- The day will be blinking, use
 to change the day you want to program for.
- Hit **ENT** to select the right day.
- Program # will start blinking:
- Use to select Program
 Number (up to 5) or use to move to next section;
- Move through these setting (Start/End and ENT Working /Pause) only with the arrows **Do Not** hit until <u>ready to save your</u> <u>settings</u>.
- For recommended program times use the Room Settings Chart.

DEVICE	SQ FT	ROOM DIMENSIONS	CEILING HEIGHT	CU FT	DURATION	DEVICE SETTINGS (In seconds)
Aura	100	10'x10'	8	800	2hr	50 on - 220 off
	200	20'x10'	8	1,600	2hr	300 on - 160 off
	400	20'x20'	8	3,200	2hr	900 on - 100 off
	800	20'x40'	8	6,400	2hr	900 on - 100 off

Learn more about how your AuraTM device works with Grignard Pure, LLC's ArrestaTM to prevent and eliminate mold and mildew odors.



Grignard Pure, LLC 505 Capobianco Plaza Rahway, NJ 07065 info@grignsardpure.com